

LV300

LV300TWIN

LV300H

Laney
POWER TO THE MUSIC

www.Laney.co.uk

IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electrical products, basic cautions should always be followed, including the following:

1. Read these instructions.
2. Keep these instructions safe.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. An apparatus with Class I construction shall be connected to a mains socket outlet with a protective connection. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point they exit from the apparatus.
11. Only use attachments/accessories provided by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. The mains plug or appliance coupler is used as the disconnect device and shall remain readily operable. The user should allow easy access to any mains plug, mains coupler and mains switch used in conjunction with this unit thus making it readily operable. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Never break off the ground pin. Connect only to a power supply of the type marked on the unit adjacent to the power supply cord.
16. If this product is to be mounted in an equipment rack, rear support should be provided.
17. Note for UK only: If the colours of the wires in the mains lead of this unit do not correspond with the terminals in your plug, proceed as follows:
 - a) The wire that is coloured green and yellow must be connected to the terminal that is marked by the letter E, the earth symbol, coloured green or coloured green and yellow.
 - b) The wire that is coloured blue must be connected to the terminal that is marked with the letter N or the colour black.
 - c) The wire that is coloured brown must be connected to the terminal that is marked with the letter L or the colour red.
18. This electrical apparatus should not be exposed to dripping or splashing and care should be taken not to place objects containing liquids, such as vases, upon the apparatus.
19. Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time.
The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the following permissible noise level exposures: According to OSHA, any exposure in excess of the above permissible limits could result in some hearing loss. Earplugs or protectors to the ear canals or over the ears must be worn when operating this amplification system in order to prevent a permanent hearing loss, if exposure is in excess of the limits as set forth above. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels such as this amplification system be protected by hearing protectors while this unit is in operation.

Duration Per Day in Hours	Sound Level dBA, slow response
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
½	110
¼ or less	115

ATTENTION: L'utilisation de tout appareil électrique doit être soumise aux précautions d'usage incluant:

1. Lire ces instructions
2. Gardez ce manuel pour de futures références.
3. Prêtez attention aux messages de précautions de ce manuel.
4. Suivez ces instructions.
5. N'utilisez pas cette unité proche de plans d'eau.
6. N'utilisez qu'un tissu sec pour le nettoyage de votre unité.
7. N'obstruez pas les systèmes de refroidissement de votre unité et installez votre unité en fonction des instructions de ce manuel.
8. Ne positionnez pas votre unité à proximité de toute source de chaleur.
9. Un appareil avec la construction de la classe I sera relié à une sortie de douille de forces à un raccordement protecteur. Connectez toujours votre unité sur une alimentation munie de prise de terre utilisant le cordon d'alimentation fourni.
10. Protégez les connecteurs de votre unité et positionnez les cablages pour éviter toutes déconnexions accidentnelles.
11. N'utilisez que des fixations approuvées par le fabricant.
12. Lors de l'utilisation sur pied ou pole de support, assurez dans le cas de déplacement de l'ensemble enceinte/support de prévenir tout basculement intempestif de celui-ci.
13. Les forces branchent ou le coupleur d'appareils est utilisé pendant que le dispositif de débranchement et restera aisément fonctionnel. L'utilisateur devrait permettre l'accès facile à toutes les forces prise, à forces coupleur et à commutateur de forces utilisé en même temps que cette unité le rendant de ce fait aisément fonctionnel. Débranchez cet appareil pendant la foudre donne l'assaut à ou si inutilisé pendant de longues périodes.
14. Seul un technicien agréé par le fabricant est à même de réparer/contrôler votre unité. Celle-ci doit être contrôlée si elle a subit des dommages de manipulation, d'utilisation ou de stockage (humidité,...).
15. Ne déconnectez jamais la prise de terre de votre unité.
16. Si votre unité est destinée à être montée en rack, des supports arrière doivent être utilisés.
17. Note pour les Royaumes-Unis: Si les couleurs de connecteurs du câble d'alimentation ne correspondent pas au guide de la prise secteur, procédez comme suit:
 - a) Le connecteur vert et jaune doit être connecter au terminal noté E, indiquant la prise de terre ou correspondant aux couleurs verte ou verte et jaune du guide.
 - b) Le connecteur bleu doit être connecter au terminal noté N, correspondant à la couleur noire du guide.
 - c) Le connecteur marron doit être connecter au terminal noté L, correspondant à la couleur rouge du guide.
18. Cet équipement électrique ne doit en aucun cas être en contact avec un quelconque liquide et aucun objet contenant un liquide, vase ou autre ne devrait être posé sur celui-ci.
19. Une exposition à de hauts niveaux sonores peut conduire à des dommages de l'écoute irréversibles. La susceptibilité au bruit varie considérablement d'un individu à l'autre, mais une large majorité de la population expériencera une perte de l'écoute après une exposition à une forte puissance sonore pour une durée prolongée.
L'organisme de la santé américaine (OSHA) a produit le guide ci-dessous en rapport à la perte occasionnée:
D'après les études menées par le OSHA, toute exposition au delà des limites décrites ci-dessous entraînera des pertes de l'écoute chez la plupart des sujets. Le port de système de protection (casque, oreillette de filtrage,...) doit être observé lors de l'opération cette unité ou des dommages irréversibles peuvent être occasionnés. Le port de ces systèmes doit être observé par toutes personnes susceptibles d'être exposées à des conditions au delà des limites décrites ci-dessus.

Durée par Jour (heures)	Niveau sonore moyen (dBA)
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
½	110
¼ ou inférieur	115

WICHTIGE SICHERHEITSHINWEISE - DEUSCH

ACHTUNG: Beim Einsatz von Elektrogeräten müssen u.a. grundlegende Vorsichtsmaßnahmen befolgt werden:

1. Lesen Sie sich diese Anweisungen durch.
2. Bewahren Sie diese Anweisungen auf.
3. Beachten Sie alle Warnungen.
4. Befolgen Sie alle Anweisungen.
5. Setzen Sie dieses Gerät nicht in der Nähe von Wasser ein.
6. Reinigen Sie es nur mit einem trockenen Tuch.
7. Blockieren Sie keine der Lüftungsöffnungen. Führen Sie die Installation gemäß den Anweisungen des Herstellers durch.
8. Installieren Sie das Gerät nicht neben Wärmequellen wie Heizungen, Heizgeräten, Öfen oder anderen Geräten (auch Verstärkern), die Wärme erzeugen.
9. Ein Apparat mit Aufbau der Kategorie I wird an einen Hauptleitungseinführungsanschluß mit einem schützenden Anschluss angeschlossen. Beeinträchtigen Sie nicht die Sicherheitswirkung des gepolten Steckers bzw. des Erdungssteckers. Ein gepolter Stecker weist zwei Stifte auf, von denen einer breiter ist als der andere. Ein Erdungsstecker weist zwei Stifte und einen dritten Erdungsstift auf. Der breite Stift bzw. der dritte Stift dient Ihrer Sicherheit. Sollte der beiliegende Stecker nicht in Ihre Steckdose passen, wenden Sie sich bitte an einen Elektriker, um die ungeeignete Steckdose austauschen zu lassen.
10. Schützen Sie das Netzkabel, sodass niemand darauf tritt oder es geknickt wird, insbesondere an Steckern oder Buchsen und ihren Austrittsstellen aus dem Gerät.
11. Verwenden Sie nur die vom Hersteller erhältlichen Zubehörgeräte oder Zubehörteile.
12. Verwenden Sie nur einen Wagen, Stativ, Dreifuß, Träger oder Tisch, der den Angaben des Herstellers entspricht oder zusammen mit dem Gerät verkauft wurde. Wird ein Wagen verwendet, bewegen Sie den Wagen mit dem darauf befindlichen Gerät besonders vorsichtig, damit er nicht umkippt und möglicherweise jemand verletzt wird.
13. Die Hauptleitungen verstopfen, oder Gerätekoppler wird während die Trennung Vorrichtung benutzt und wird bereitwillig funktionell bleiben. Der Benutzer sollte einfachen Zugang zu allen möglichen Hauptleitungen Stecker, zu den Hauptleitungen Koppler und zum Hauptleitungen Schalter erlauben, der in Verbindung mit dieser Maßeinheit benutzt wird, die folglich ihn bereitwillig funktionell bildet. Trennen Sie diesen Apparat während der Blitzstürme oder wenn unbunutzt, für lange Zeitschnitte.
14. Lassen Sie sämtliche Wartungsarbeiten von qualifizierten Kundendiensttechnikern durchführen. Eine Wartung ist erforderlich, wenn das Gerät in irgendeiner Art beschädigt wurde, etwa wenn das Netzkabel oder der Netzstecker beschädigt wurden, Flüssigkeit oder Gegenstände in das Gerät gelangt sind, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht normal arbeitet oder heruntergefallen ist.
15. Der Erdungsstift darf nie entfernt werden. Schließen Sie nur an die Stromversorgung der Art an, die am Gerät neben dem Netzkabel angegeben ist.
16. Wenn dieses Produkt in ein Geräte-Rack eingebaut werden soll, muss eine Versorgung über die Rückseite eingerichtet werden.
17. Hinweis – Nur für Großbritannien: Sollte die Farbe der Drähte in der Netzeitung dieses Geräts nicht mit den Klemmen in Ihrem Stecker übereinstimmen, gehen Sie folgendermaßen vor:
 - a) Der grün-gelbe Draht muss an die mit E (Symbol für Erde) markierte bzw. grüne oder grün-gelbe Klemme angeschlossen werden.
 - b) Der blaue Draht muss an die mit N markierte bzw. schwarze Klemme angeschlossen werden.
 - c) Der braune Draht muss an die mit L markierte bzw. rote Klemme angeschlossen werden.

18. Dieses Gerät darf nicht ungeschützt Wassertropfen und Wasserspritzen ausgesetzt werden und es muss darauf geachtet werden, dass keine mit Flüssigkeiten gefüllte Gegenstände, wie z. B. Blumenvasen, auf dem Gerät abgestellt werden.

19. Belastung durch extrem hohe Lärmpegel kann zu dauerhaftem Gehörverlust führen. Die Anfälligkeit für durch Lärm bedingten Gehörverlust ist von Mensch zu Mensch verschieden, das Gehör wird jedoch bei jedem in gewissem Maße geschädigt, der über einen bestimmten Zeitraum ausreichend starkem Lärm ausgesetzt ist. Die US-Arbeitschutzbehörde (Occupational and Health Administration, OSHA) hat die folgenden zulässigen Pegel für Lärmbelastung festgelegt:

Laut OSHA kann jede Belastung über den obenstehenden zulässigen Grenzwerten zu einem gewissen Gehörverlust führen. Sollte die Belastung die obenstehenden Grenzwerte übersteigen, müssen beim Betrieb dieses Verstärkungssystems Ohrenstopfen oder Schutzvorrichtungen im Gehörgang oder über den Ohren getragen werden, um einen dauerhaften Gehörverlust zu verhindern. Um sich vor einer möglicherweise gefährlichen Belastung durch hohe Schalldruckpegel zu schützen, wird allen Personen empfohlen, die mit Geräten arbeiten, die wie dieses Verstärkungssystem hohe Schalldruckpegel erzeugen können, beim Betrieb dieses Geräts einen Gehörschutz zu tragen.

Dauer pro Tag in Stunden	Geräuschpegel dBA langsame Reaktion
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
½	110
¼ oder weniger	115

CUIDADO: Cuando use productos electrónicos, debe tomar precauciones básicas, incluyendo las siguientes:

1. Lea estas instrucciones.
 2. Guarde estas instrucciones.
 3. Haga caso de todos los consejos.
 4. Siga todas las instrucciones.
 5. No usar este aparato cerca del agua.
 6. Limpiar solamente con una tela seca.
 7. No bloquear ninguna de las salidas de ventilación. Instalar de acuerdo a las instrucciones del fabricante.
 8. No instalar cerca de ninguna fuente de calor como radiadores, estufas, hornos u otros aparatos (incluyendo amplificadores) que produzcan calor.
 9. Un aparato con la construcción de la clase I será conectado con un enchufe de zócalo de las cañerías con una conexión protectora. No retire la patilla protectora del enchufe polarizado o de tipo "a Tierra". Un enchufe polarizado tiene dos puntas, una de ellas más ancha que la otra. Un enchufe de tipo "a Tierra" tiene dos puntas y una tercera "a Tierra". La punta ancha (la tercera) se proporciona para su seguridad. Si el enchufe proporcionado no encaja en su enchufe de red, consulte a un electricista para que reemplace su enchufe obsoleto.
 10. Proteja el cable de alimentación para que no sea pisado o pinchado, particularmente en los enchufes, huecos, y los puntos que salen del aparato.
 11. Usar solamente añadidos/accesorios proporcionados por el fabricante.
 12. Usar solamente un carro, pie, trípode, o soporte especificado por el fabricante, o vendido junto al aparato. Cuando se use un carro, tenga cuidado al mover el conjunto carro/aparato para evitar que se dañe en un vuelco. No suspenda esta caja de ninguna manera
 13. Las cañerías tapan o el acoplador de la aplicación se utiliza mientras que el dispositivo de la desconexión y seguirá siendo fácilmente operable. El usuario debe permitir el acceso fácil a cualquier cañería enchufe, a las cañerías acoplador y al interruptor de las cañerías usado conjuntamente con esta unidad así que lo hace fácilmente operable. Desenchufe este aparato durante tormentas del relámpago o cuando es innecesario por períodos del tiempo largos.
 14. Para cualquier reparación, acuda a personal de servicio cualificado. Se requieren reparaciones cuando el aparato ha sido dañado de alguna manera, como cuando el cable de alimentación o el enchufe se han dañado, algún líquido ha sido derramado o algún objeto ha caído dentro del aparato, el aparato ha sido expuesto a la lluvia o la humedad, no funciona de manera normal, o ha sufrido una caída.
 15. Nunca retire la patilla de Tierra. Conecte el aparato sólo a una fuente de alimentación del tipo marcado al lado del cable de alimentación.
 16. Si este producto va a ser enrrollado con más equipo, use algún tipo de apoyo trasero.
 17. Nota para el Reino Unido solamente: Si los colores de los cables en el enchufe principal de esta unidad no corresponden con los terminales en su enchufe, proceda de la siguiente manera:
 - a) El cable de color verde y azul debe ser conectado al terminal que está marcado con la letra E, el símbolo de Tierra (earth), coloreado en verde o en verde y amarillo.
 - b) El cable coloreado en azul debe ser conectado al terminal que está marcado con la letra N o el color negro.
 - c) El cable coloreado en marrón debe ser conectado al terminal que está marcado con la letra L o el color rojo.
 18. Este aparato eléctrico no debe ser sometido a ningún tipo de goteo o salpicadura y se debe tener cuidado para no poner objetos que contengan líquidos, como vasos, sobre el aparato.
 19. La exposición a altos niveles de ruido puede causar una pérdida permanente en la audición. La susceptibilidad a la pérdida de audición provocada por el ruido varía según la persona, pero casi todo el mundo perderá algo de audición si se expone a un nivel de ruido suficientemente intenso durante un tiempo determinado. El Departamento para la Salud y para la Seguridad del Gobierno de los Estados Unidos (OSHA) ha especificado las siguientes exposiciones al ruido permisibles:
- De acuerdo al OSHA, cualquier exposición que excede los límites arriba indicados puede producir algún tipo de pérdida en la audición. Protectores para los canales auditivos o tapones para los oídos deben ser usados cuando se opere con este sistema de sonido para prevenir una pérdida permanente en la audición, si la exposición excede los límites indicados más arriba. Para protegerse de una exposición a altos niveles de sonido potencialmente peligrosa, se recomienda que todas las personas expuestas a equipamiento capaz de producir altos niveles de presión sonora, tales como este sistema de amplificación, se encuentren protegidas por protectores auditivos mientras esta unidad esté operando.

Duración por Día en Horas	Nivel de Sonido dBa, Respuesta Lenta
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
½	110
¼ o menos	115

IMPORTANT SAFETY INSTRUCTIONS

	Intended to alert the user to the presence of uninsulated 'Dangerous Voltage' within the products enclosure that may be sufficient to constitute a risk of electrical shock to persons. Ce symbole est utilise pour indiquer a l'utilisateur de ce produit de tension non-isolee dangereuse pouvant etre d'intensite suffisante pour constituer un risque de choc electrique. Este simbolo tiene el propósito de alertar al usuario de la presencia de '(voltaje) peligroso' que no tiene aislamiento dentro de la caja del producto que puede tener una magnitud suficiente como para constituir riesgo de corriente. Dieses Symbol soll den Anwender vor unsolierten gefährlichen Spannungen innerhalb des Gehäuses warnen, die von Ausrüchender Starke sind, um einen elektrischen Schlag verursachen zu können.
	Intended to alert the user of the presence of important operating and maintenance (Servicing) instructions in the literature accompanying the product. Dieses Symbol soll den Anwender vor unsolierten gefährlichen Spannungen innerhalb des Gehäuses warnen, die von Ausrüchender Starke sind, um einen elektrischen Schlag verursachen zu können. Este simbolo tiene el propósito de la alertar al usuario de la presencia de instrucciones importantes sobre la operacion y mantenimiento en la literatura que viene con el producto. Dieses Symbol soll den Benutzer auf wichtige Instruktionen in der Bedienungsanleitung aufmerksam machen, die Handhabung und Wartung des Produkts betreffen.
CAUTION:	Risk of electrical shock - DO NOT OPEN. To reduce the risk of electrical shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified personnel.
ATTENTION:	Risques de choc électrique - NE PAS OUVIRIR Afin de reduire le risque de choc électrique, ne pas enlever le couvercle. Il ne se trouve à l'intérieur aucune pièce pouvant être réparée par l'utilisateur. Confier l'entretien à un personnel qualifié.
PRECAUCION:	Riesgo de corriente - no abra Para disminuir el riesgo de corriente, no abra la cubierta. No hay piezas adentro que el pueda reparar. Deje todo mantenimiento a los técnicos calificados.
VORSICHT:	Risiko - Elektrischer Schlag! Nicht öffnen! Um das Risiko eines elektrischen Schläges zu vermeiden, nicht die Abdeckung entfernen. Es befinden sich keine Teile darin, die vom Anwender repariert werden könnten. Reparaturen nur von qualifiziertem Fachpersonal durchführen lassen.
WARNING:	To prevent electrical shock or fire hazard, do not expose this appliance to rain or moisture. Before using this appliance please read the operating instructions for further warnings. Afin de prévenir les risques de décharge électrique ou de feu, n'exposez pas cet appareil à la pluie ou à l'humidité. Avant d'utiliser cet appareil, lisez les informations supplémentaires situées dans le guide.
ADVERTISSEMENT:	Para evitar corrientazos o peligro de incendio, no deje expuesto a la lluvia o humedad este aparato. Antes de usar este aparato, lea las advertencias en la guía de operación.
ADVERTENCIA:	Um einen elektrischen Schlag oder Feuergefahr zu vermeiden, sollte dieses Gerät nicht dem Regen oder Feuchtigkeit ausgesetzt werden. Vor Inbetriebnahme unbedingt die Bedienungsanleitung lesen.
ACHTUNG:	

After unpacking your amplifier check that it is factory fitted with a three pin 'grounded' (or earthed) plug. Before plugging into the power supply ensure you are connecting to a grounded earth outlet.

If you should wish to change the factory fitted plug yourself, ensure that the wiring convention applicable to the country where the amplifier is to be used is strictly conformed to. As an example in the United Kingdom the cable colour code for connections are as follows.

EARTH or GROUND GREEN/YELLOW
NEUTRAL - BLUE
LIVE - BROWN



NOTE

This manual has been written for easy access of information. The front and rear panels are graphically illustrated, with each control and feature numbered. For a description of the function of each control feature, simply check the number with the explanations adjacent to each panel.

Your Laney amplifier has undergone a thorough two stage, pre-delivery inspection, involving actual play testing.

When you first receive your Laney guitar amplifier, follow these simple procedures:

- (i) Ensure that the amplifier is the correct voltage for the country it is to be used in.
 - (ii) Connect your instrument with a high quality shielded instrument cable. You have probably spent considerable money on your amplifier and guitar - don't use poor quality cable it won't do your gear justice.
- Please retain your original carton and packaging so in the unlikely event that some time in the future your amplifier should require servicing you will be able to return it to your dealer securely packed.

Care of your Laney amplifier will prolong its life.....and yours!

LV300**LV300TWIN****LV300H**

Supply Voltage on all models:- Factory Preset	~100V, ~120V, ~220V, ~230V, ~240V 50/60Hz		
Mains Fuse:	-100V>~120V -220V,~230V,~240V	T5A L T2A L	T5A L T2A L
Power Consumption	300W	300W	300W
Output Power Rating	120W	120W	120W
Loudspeaker	12" Custom Designed Driver	2 x 12" Custom Designed Driver	N/A
Features:	Rugged Construction	Rugged Construction	Rugged Construction
	ECC83 Tube Drive Stage	ECC83 Tube Drive Stage	ECC83 Tube Drive Stage
	Reverb	Reverb	Reverb
	Footswitchable Cannels & Reverb	Footswitchable Cannels & Reverb	Footswitchable Cannels & Reverb
	LVFS3 Footswitch Included	LVFS3 Footswitch Included	LVFS3 Footswitch Included
EQ	Both channels contain separate Passive Bass, Middle and Treble	Both channels contain separate Passive Bass, Middle and Treble	Both channels contain separate Passive Bass, Middle and Treble
	Clean Bright Switch	Clean Bright Switch	Clean Bright Switch
	Independent VScoop switches for Drive 1+2	Independent VScoop switches for Drive 1+2	Independent VScoop switches for Drive 1+2
	VTS - V Tone Shift Technology	VTS - V Tone Shift Technology	VTS - V Tone Shift Technology
	Yes - (Nominal 750mV Level) (Series-Insert)	Yes - (Nominal 750mV Level) (Series-Insert)	Yes - (Nominal 750mV Level) (Series-Insert)
Ex. Loudspeaker Socket	(8 Ohms minimum, internal speaker remains connected)	(8 Ohms minimum, internal speaker remains connected)	Twin Sockets, 4 Ohms minimum
Input Impedance	1M Ohm/47pF	1M Ohm/47pF	1M Ohm/47pF
Recommended Ex. Cabinet	LV412A	LV412A	LV412A
Top Handle	Yes	Yes	Yes
Size	502*583*286 (H*W*D)	502*676*286 (H*W*D)	250*667*248 (H*W*D)
Unit Weight	17.4Kg	19.3Kg	12.4Kg
Packed Weight	18.2Kg	20.5Kg	13.6Kg



This product conforms to the requirements of the following European Regulations, Directives & Rules:-


CE Mark (93/68/EEC), Low Voltage (2006/95/EC), EMC (2004/108/EEC),
RoHS (EU2002/95/EC), WEEE (EU2002/96/EC)



In order to reduce environmental damage, at the end of its useful life, this product must not be disposed of along with normal Household waste to landfill sites. It must be taken to an approved recycling centre according to the recommendations of the WEEE (Waste Electrical and Electronic Equipment) directive applicable in your country.


BLOCK DIAGRAMS

LV300 **LV300TWIN**

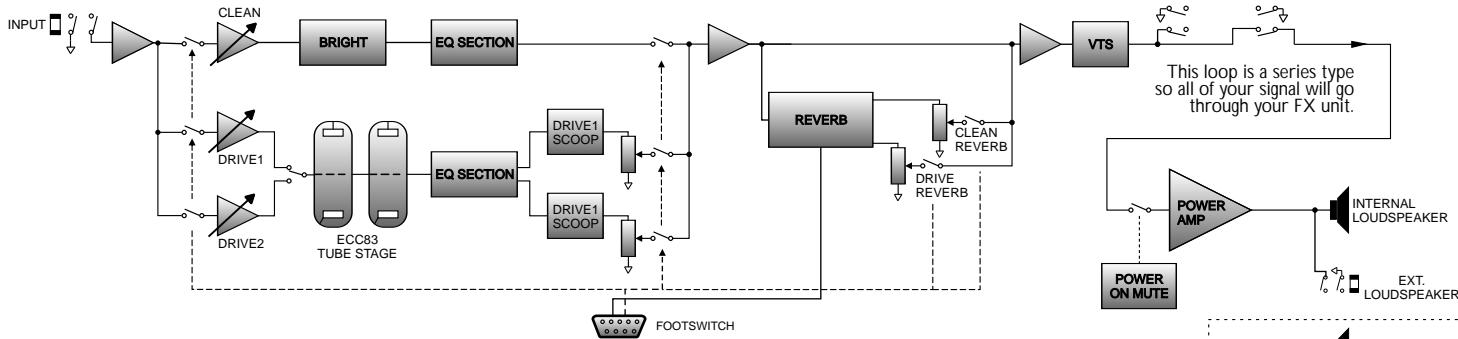

In the interest of continued development,
Laney reserves the right to amend product specification
without prior notification.

LV300H

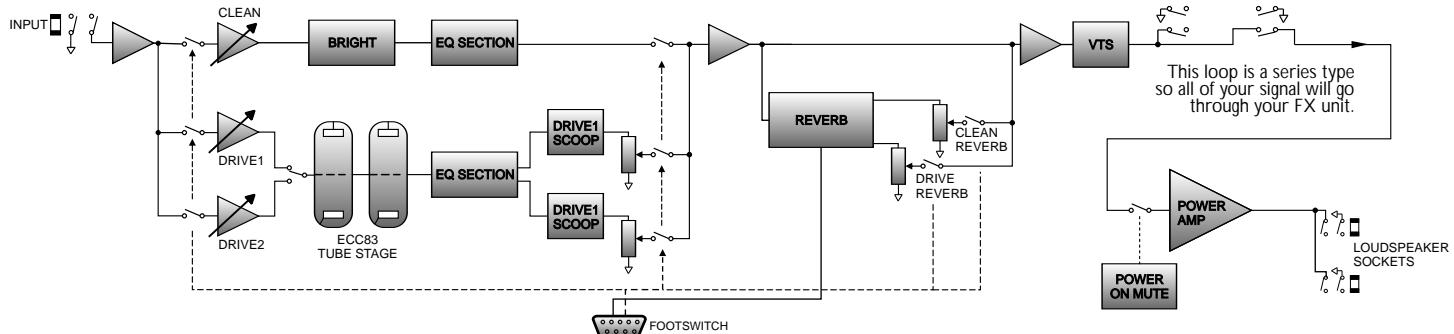

Dear Player,

Thank you very much for purchasing your new Laney product and becoming part of the worldwide Laney family. Each and every Laney unit is designed and built with the utmost attention to care and detail, so I trust yours will give you many years of enjoyment.

Laney products have a heritage which stretches back to 1967 when I first began building valve amplifiers in my parent's garage.

Since then we have moved on from strength to strength developing an extensive range of guitar, bass, public address and keyboard amplification products along with a list of Laney endorsees that includes some of the world's most famous and respected musicians.

At the same time we believe we have not lost sight of the reason Laney was founded in the first place - a dedication to building great sounding amplification for working musicians.

Warm Regards,



Lyndon Laney CEO

INTRODUCTION

The LV300 and LV300Twin are 120W open back three channel guitar combos.

They feature a true tube-loaded drive stage; separate three band eq for the clean and drive channels (Drive 1 + 2 share); clean channel bright switch; drive channel 'V' preshape and an overall 'VTS' tone shaping switch.

The built in reverb has independent level controls for the clean and drive channels and is footswitchable with the enclosed three way footswitch, as are the clean and drive channels.



They also feature an extension speaker socket to drive additional cabinets and a global FX Loop for any external effects units.



LV300

The LV300 is loaded with a single 12" Custom loudspeaker while the LV300Twin has dual 12" Custom loudspeakers.

LV300TWIN

The LV300H is a 120W three channel guitar head, it shares all the same great features of the LV Combo's,

You'll want your playing to be heard.

That's why we amplify the sound of this beautiful tube driven preamp with a 120 watt output stage, that can deliver into a 4 ohm load, allowing you to connect up to the cabs especially designed for this head, we recommend the LV412A as the one to use, matched for sound and style.

An explanation of these features follows on pages 12-14.




LV300H

Every Laney product is extensively play tested by experienced guitarists to ensure it has the tone and durability to perform at the very highest level, before being shipped to our customers. We hope you enjoy using your new LV300, whichever model you choose, as much as we enjoyed designing and making it. It should give you years of trouble-free service, however please take time to read this manual, as it will allow you to get the best from your model.

Best wishes from all at Laney.

FRONT PANEL CONTROLS

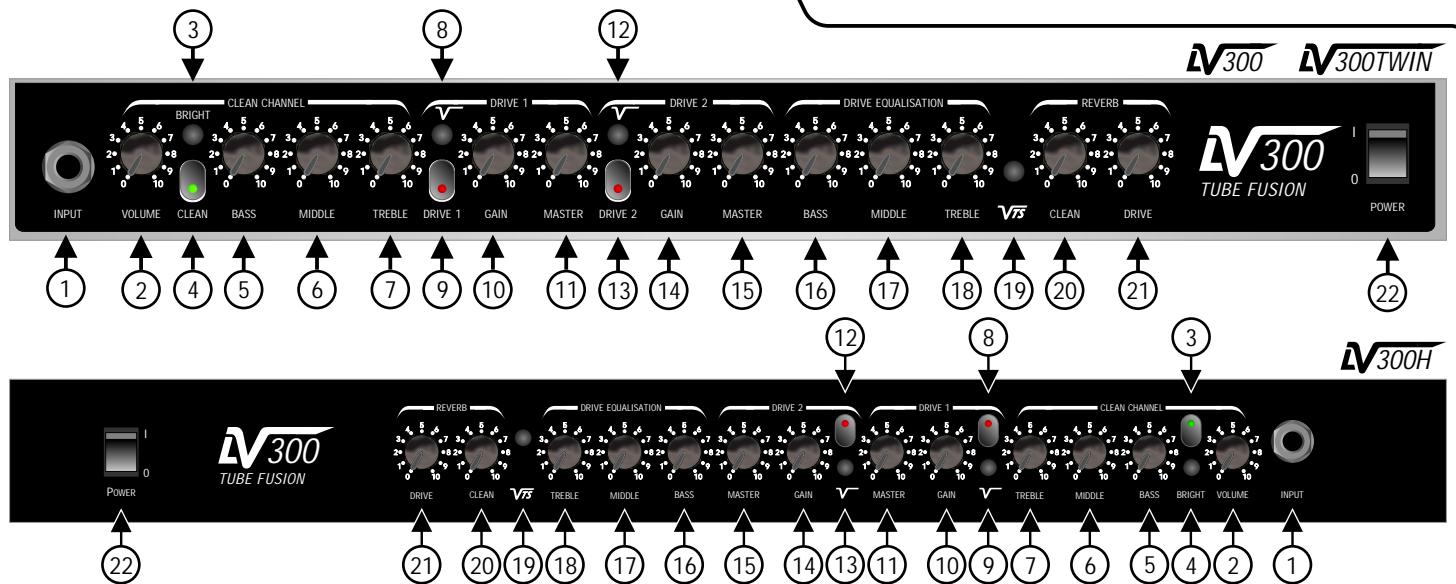


- ① This socket should be used for connecting your instrument to the amplifier. Only use a good quality screened cable.
- ② Controls the volume level of the clean channel.
- ③ Adds brightness and sparkle to the clean channel when switched in.
- ④ Press in to activate the clean channel. The centre of the switch will be lit when active.
- ⑤ Controls the amount of bass or bottom end present on the clean channel.
- ⑥ Controls the amount of mid present on the clean channel.
- ⑦ Controls the amount of treble present on the clean channel.
- ⑧ The VScoop **V** switch drastically cuts out any mid frequencies present in the drive1 sound giving you a very modern, aggressive lead tone.

- ⑨ Switch in to activate the drive1 channel. When active, control the amount of distortion with ⑩ and the overall volume with ⑪. The centre of the switch will be lit when active.
- ⑩ Sets the level of gain on the drive1 channel. For optimum results the gain control should be used in conjunction with the volume control ⑪. Setting medium levels of gain with high levels of volume will result in a nice crisp blue'sy lead tone. Setting the gain control to 8-10 will give you a punchy hard rock lead tone. Obviously the type of guitar you use will have an effect on the overall sound you hear.
- ⑪ Controls the overall level on the drive1 channel. Use in conjunction with ⑩.
- ⑫ The VScoop **V** switch drastically cuts out any mid frequencies present in the drive2 sound giving you a very modern, aggressive lead tone.
- ⑬ Switch in to activate the drive2 channel. When active, control the amount of distortion with ⑭ and the overall volume with ⑮. The centre of the switch will be lit when active.
- ⑭ Sets the level of gain on the drive2 channel. For optimum results the gain control should be used in conjunction with the volume control ⑮. Setting low levels of gain with high levels of volume will result in a nice crisp blue'sy lead tone. Setting the gain control to midway with a medium volume level will give you a punchy hard rock lead tone and setting the gain to maximum and backing the volume off, gives you a full on metal lead tone. Obviously the type of guitar you use will have an effect on the overall sound you hear.
- ⑮ Controls the overall level on the drive2 channel. Use in conjunction with ⑭.
- ⑯ Controls the amount of bass or bottom end present on the two drive channels.
- ⑰ Controls the amount of mid present on the two drive channels.
- ⑱ Controls the amount of treble present on the two drive channels.
- ⑲ The 'VTS Tone Shaping' Radically alters the EQ of the amplifier by cutting some of the lower mid tones and carefully boosting certain bass and upper mid frequencies. It is a global setting and may be used on any of the channels giving you lots of different sound possibilities.
- ⑳ Sets the amount of reverb applied to the clean channel
- ㉑ Sets the amount of reverb applied to drive1 and drive2 channels.
- ㉒ Main power switch for the unit. Note: One of the three channel led's will always be lit when the amplifier is switched on.

Always switch off and disconnect power cord when not in use

REAR PANEL

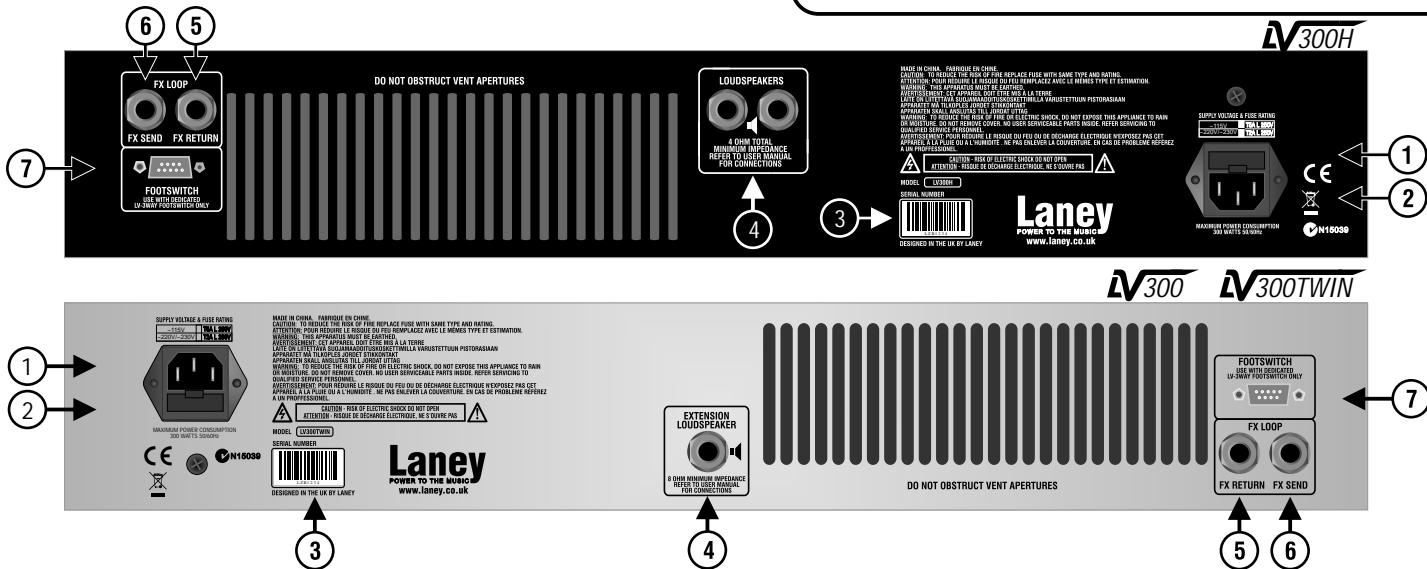

- ① Power inlet socket. Make sure the specified voltage is correct for your country!
- ② This drawer contains the main safety fuse for the unit.
- ③ The mains fuse ratings are detailed on page 7 of this manual
- ④ Displays the model number, power requirements and serial number of the unit.
- ⑤ Connect an extension loudspeaker cabinet here, the internal loudspeaker remains connected. The impedance of the extension cabinet must not be less than 8 Ohms, (4 Ohms on the Head). Connecting cabinets that have a lower impedance will result in the amplifier overheating. .
- ⑥ Line level FX Loop Return to connect back from an external effects controller.
- ⑦ Line level FX Loop Send to connect to an external effects controller.
- ⑧ Connect a dedicated Laney LV3Way footswitch here (included) to allow remote switching of the reverb and channels. Drive channel must be enabled (with ⑨)

Amplifier connection: In order to avoid damage, it is advisable to establish and follow a pattern for turning on and off your equipment. With all system parts connected, turn on source equipment, tape decks, cd players, mixers, effects processors etc. BEFORE turning on your guitar amplifier. Many products have large transient surges at turn on and off which can cause damage to your speakers. By turning on your guitar amplifier LAST and making sure its Volume controls are set to minimum any transients from other equipment will not reach your loudspeakers. Wait until all system parts have stabilised; usually a couple of seconds. Similarly when turning off your system always turn down the Volume controls on your guitar amplifier and then turn off its power before turning off other equipment.

Cables: never use shielded or microphone cable for any speaker connections as this will not be substantial enough to handle the amplifier load and could cause damage to your amplifier system.

Caution: These professional loudspeaker systems are capable of generating very high sound pressure levels. Use care with placement and operation to avoid exposure to excessive levels that can cause permanent hearing damage. (Refer to guidelines on page 2)

Servicing: The user should not attempt to service these products. Refer all servicing to qualified service personnel.




This product conforms to the requirements of the following European Regulations, Directives & Rules:-
CE Mark (93/68/EEC), Low Voltage (2006/95/EC), EMC (2004/108/EEC),
RoHS (EU2002/95/EC), WEEE (EU2002/96/EC)



In order to reduce environmental damage, at the end of its useful life, this product must not be disposed of along with normal Household waste to landfill sites. It must be taken to an approved recycling centre according to the recommendations of the WEEE (Waste Electrical and Electronic Equipment) directive applicable in your country.

LV300

LV300TWIN

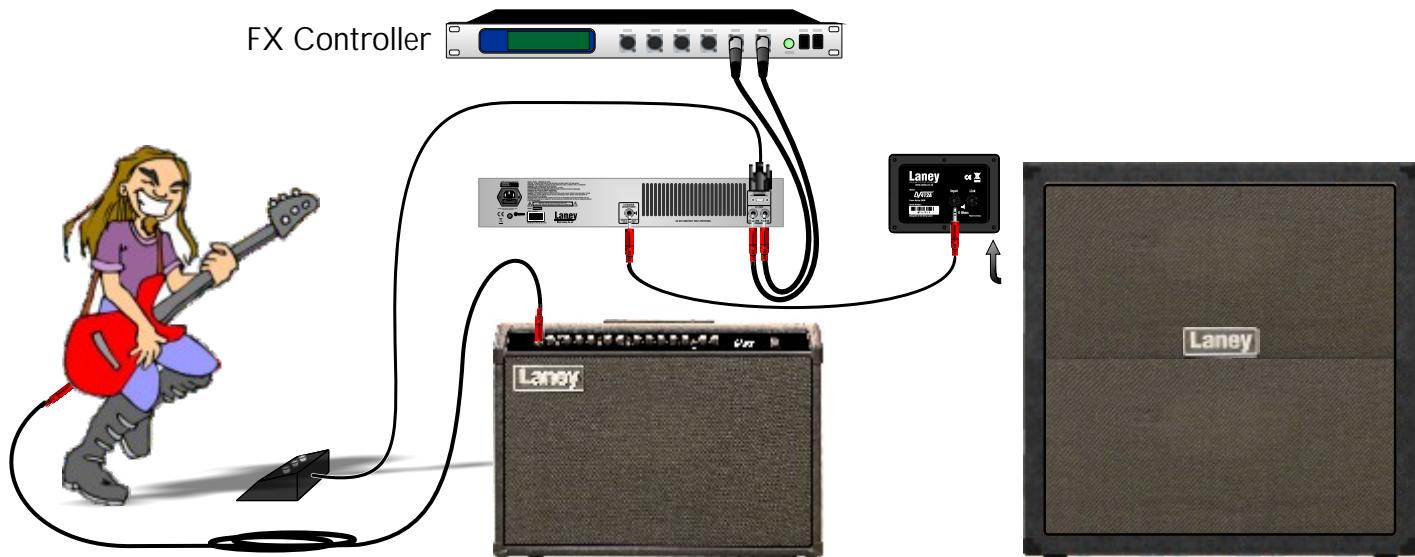


The total impedance of the cabinet/s must not be less than 8 Ohms.

Connecting cabinets that have a lower impedance than 4 Ohms will result in the amplifier overheating and may cause permanent damage.

Permitted configurations could be, 1x8 Ohm, 2x8 Ohm, or 2x16 Ohm cabinets.

L300H

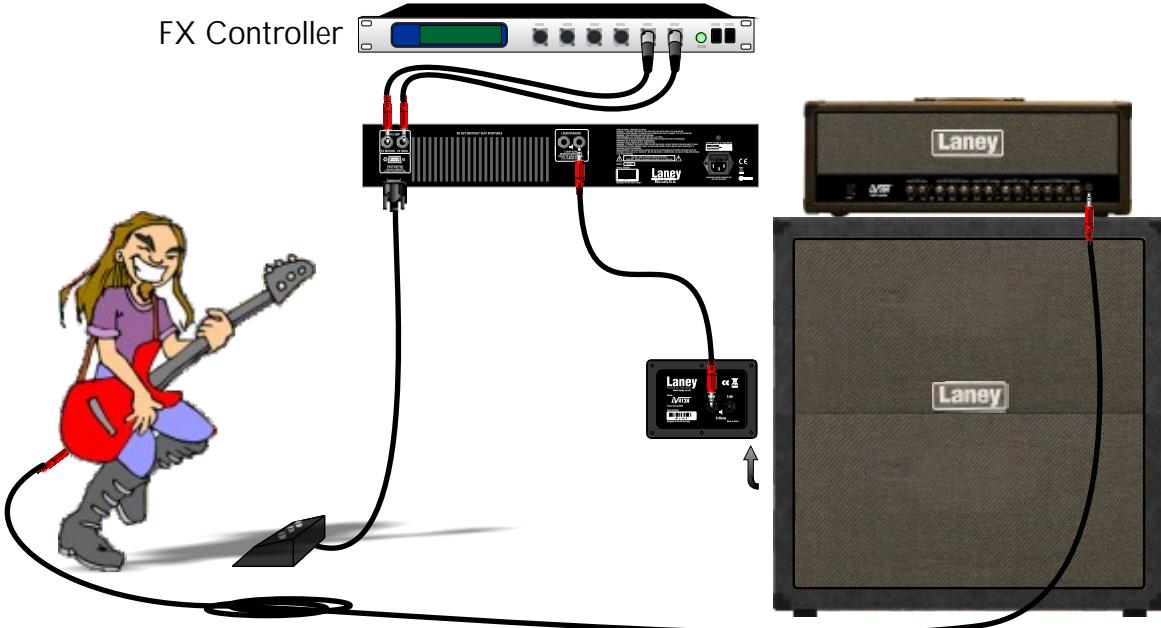

The total impedance of the cabinet/s must not be less than 4 Ohms.

Connecting cabinets that have a lower impedance than 4 Ohms will result in the amplifier overheating and may cause permanent damage.

Permitted configurations could be 1x4 Ohm, 1x8 Ohm, 2x8 Ohm, or 2x16 Ohm cabinets.

QUICK START SETTINGS - suggestions only, experiment!



CLEAN SETTINGS



BLUES SETTINGS



ROCK SETTINGS



METAL SETTINGS

QUICK START SETTINGS - (LV300 Shown, settings will suit all models)

Laney
POWER TO THE MUSIC

OPERATING INSTRUCTIONS - Issue: 1.1
www.Laney.co.uk